

T106



INDEX

Installment

Safety	3
Install SIM card and battery	7
Charge battery	8

Basic functions

Power on	10
Dialing	10
Answer/end a call	12
Volume control	12

Menu

Phonebook	13
Messaging	14
Call center	17
Multimedia	20
Toolbox	22
Settings	23
FM	29

Maintenance

Maintenance	31
-------------------	----

INSTALLMENT

Safety precaution

Please note the following rules. It may cause dangerous or illegal situation if you don't obey them. Please refer to complete user manual for more details.



Safe driving

Please obey native related laws and regulations. Please release your both hands from the phone during driving.



Power off your mobile phone if it's forbidden to use

When mobile phone is forbidden to use or may cause interference or danger, please obey all rules of the restricted area.

**Interference**

Performance of wireless devices may be affected by interference. Some components of mobile phone are magnetic. Please keep a suitable distance between magnetic objects and your mobile phone; otherwise their storage may be damaged.

**Qualified maintenance service**

Only qualified serviceman can be allowed to install or mend the phone.

**Battery, charger and other accessories**

Only the battery, charger and other accessories, which are suitable for this model and authorized by EZFONE, can be allowed to replace. Please don't connect your phone with other incompatible devices. Please charge the battery every three months if it has being idle for long.

**Keep dry**

This model is not the water-proof one, please keep it dry.

**Protect your hearing**

If you use headset, please enjoy your music in a moderate volume. Don't place your device too close to your ear when using loudspeaker.

Medical device

Wireless devices may cause interference with non-protected medical devices. If you have any queries, please contact doctors or the manufacturer.

Pacemaker

Maintain a minimum of 1 cm between mobile phone and pacemaker to avoid potential interference. People with pacemaker please notice these suggestions:

INSTALLMENT

- Keep at least 1cm between mobile phone and pacemaker when the mobile phone is turning on.
- Don't put you phone in breast welt pocket
- Please use your phone on the contrary side of pacemaker to reduce interference.
- Please turn off your phone immediately once you doubt there is interference around.

Emergency dialing

Important !

The functions used by mobile phone include wireless signal, mobile phone network, ground network and user programming. That means connection can't be guaranteed in all situation. Hence, please don't only depend on mobile phone to make important calls like medical emergency.


Specific Absorption Rate (SAR)

This mobile phone meet international safety requirement about exposure of radio wave.


C021 SAR measured value is 1.156 W/kg (GSM 900MHz)/0.251W/kg (DCS 1800MHz)

According to related regulators, upper limit value is 2.0 W/kg. C04 head radiation value is 0.573 W /KG , deviation of measured system is 20.5%.


INSTALLMENT
INSTALL SIM CARD AND BATTERY



SIM card slot is behind the battery



1. Follow the diagram to remove the back cover




2. If the battery was installed, please take it out




3 Insert the SIM card as the following diagram show, and make sure its direction is correct. Please notice not to scratch or bend contactors of SIM card

INSTALLMENT

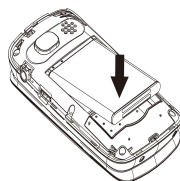

4. Install the battery as the following diagram show. Ensure the side with contactors faces down.

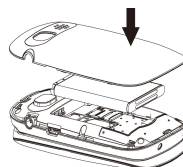

5. Replace back cover.

CHARGING

Before the first time using mobile phone, you must charge the battery. You can charge by using travel charger or connecting your phone to computer with data line.

Please use original charger and data line. None-original charger and data line may cause explode of battery or damage of you device.

Attention: Don't remove the battery during charging; otherwise it would damage your device.

- 1) Your phone would be charging after successfully connecting, and battery icon would dynamically display the increase of power level when power on.
- 2) If the phone is power off, the screen would display charging animation during charging. When battery is fully charged, the battery icon would stop moving. Please unplug the charger from power outlet in time. It's normal that the phone is slightly hot.

BASIC FUNCTION

TURN ON THE PHONE

Hold the red button to switch the phone on or off.

You may see one of the following information after power on:

SIM card is lost or insert incorrectly ;

SIM card is damaged or invalid.

If SIM card is available but protected by PIN code, it would display PIN:

Input PIN code and enter.

Use "erase" to delete.

Attention:

If your SIM card doesn't provide PIN and PUK code, please contact with your carrier.

Residue time : To mention you how many chances left for you to input the correct PIN. If

it is used up, the mobile phone would inform you that SIM card is locked. You should

input PUK code to unlock.

Input new PIN code and enter

Change language, time and date

Default language is set by SIM card.

DIALING

Dial phone number (press right button to delete wrong number)  press green dialing key to make a call

BASIC FUNCTION

Keep single call	Hold current call and make another one
End a single	End the current single call
End all calls	End all of current calls
New call	Make a new call
Phonebook	Choose to view phonebook
Call record	Choose to view dialing record
Message	Choose to view or edit SMS
Record	Choose to record calls
Mute	Activate/deactivate to select current call is mute or not.
Volume	Adjust volume

BASIC FUNCTION

Press right button to use loudspeaker in a call.

ANSWER/END A CALL

Answer a call:

press left button or green dialing key to answer a call

End a call:

press right button or red button

VOLUME CONTROL

Enter setting menu to adjust volume.

MENU

PHONEBOOK

Your mobile phone has phonebook function which can store your contacts.

View

You can view the detail information of entry

Send text message

Input the content and choose one or more contacts from phonebook to send

Call

Select appointed phone number to make a call

Edit

Edit contacts' name and number

Delete

Delete contacts' name and number

Copy

Copy contacts' information from phone to SIM card

Phonebook setting

- *Preferred storage*: select to change storage path
- *Speed dial*: set quick dial number and status
- *My number*: set your mobile phone number
- *Other phone number*: set other numbers
- *Memory status*: view the status of phonebook including SIM card and phone memory
- *Copy contacts*: From SIM card to the mobile phone, or from the mobile phone to SIM card
- *Remove contacts*: From SIM card to the mobile phone, or from the mobile phone to SIM card
- *Delete all contacts*: delete contacts in phone or in SIM card

MESSAGING

SMS is a kind of network service that cannot be used to send and receive short messages until you apply to the network operator.

If the message box is full, there would be a flashing message icon informing you. That means you should clean your message box in order to receive message normally.

If messages are successfully received by the contact, your phone would inform you by a prompt tone.

Voice mailbox is a kind of network service that you can be used after applying to the network operator. Inquire to your service supplier to gain more detail.

- *Link to the voice:* To dial the numbers stored in voice mailbox. If you have two phone numbers, each of them has its own voice mailbox number
- *Edit:* Edit or delete you voice mailbox number, enter to store present number
- *Tips:* When the phone is stand by, press "1" to dial voice mailbox

Write a message

Every message can contain 609 characters. Press "#" to change input method, and "*" to select symbol. Hold right button to delete all characters input; hang up key return to stand by; up and down key can control the cursor.

Before sending out, you can input phone number or select contact's number from phonebook.

Attention: image message function cannot be used unless network operator or service supplier support. Only the mobile phone with image message function can normally receive and display images.

Inbox

È possibile visualizzare gli SMS ricevuti

- *View*: view detail number and content
- *Reply*: reply to present message
- *Call sender*: dial to addresser
- *Forward*: transpond this message
- *Delete*: delete present message
- *Delete all*: Delete all messages in inbox
- *Save to phonebook*: Restore contact to phonebook

Drafts

Messages which haven't sent yet would be kept here

Outbox

Message failed to send would kept in outbox

Sent messages

Sent message would be saved here if you open the function saving sent message in SMS setting

SMS settings

- *SIM*: input native SMS center number to activate the function sending message. You can open sending report and reply path
- *Memory status*: view the storage status of both mobile phone and SIM card
- *Save sent message*: open/close
- *Preferred storage*: can select mobile phone or SIM card

Voice mailbox

You can set voice mailbox number, and press “1” to dial directly after successfully setting.

CALL CENTER

Menu → call record

Missed call	Call you missed
Dialed call	Calls you have dialed
Received call	Calls you answered
Delete call record	Can select to delete one kind of records above or all

Call settings

Menu → call center → call settings → call waiting → enter

Call waiting: Select to open or close call waiting function

Activate	Open call waiting function
Deactivate	Close call waiting function
Query status	Inquire the status of call waiting

Menu → call center → call setting → call divert

Divert all voice call	Divert all incoming calls to the phone number you set
Divert if Unreachable	When the network cannot find your mobile phone (switched-off or out of the service area), it will divert the calls

Divert if no Answer	When the mobile phone does not answer the call, the network will automatically divert to the phone number you set
Divert if Busy	When you are on line, the network will divert the call
Divert All Data Calls	Divert all GSM call to the phone number you set
Cancel All Diverts	Cancel all divert functions

Call divert: divert the call meet conditions to another appointed phone number. This service needs support of network operator.

Menu → call center → call setting → call barring

Outgoing calls	Bar all outgoing call
Incoming calls	Bar incoming calls/Roaming calls

Cancel all	Cancel all calls barring
Change password	Allows you to change the call barring password

Menu → setting → call setting → advanced setting

Automatic redial	Open/close automatic redial
Calling time reminder	Can select calling time prompt open /one time/period
Answer mode	You can press any key to answer, uncover to answer or automatically answer

To active function FLIP ACTIVE (direct response to the opening of the phone)

Menu → Call center → Call settings → Advanced setting → Answer mode → Cover answer

MULTIMEDIA

File manager: can check the storage status

Formatting: formatting erases all data and new folders of memory card. Image file folder would recover after rebooting Audio, and Photos file folder would be automatically generated as soon as taking first picture.

MENU

[default file folder]: Images、Audio、Received、Photos、My music

Images—— the default save path of image

Audio—— the default save path of record

Received—— the default save path of received file

Photos—— the default save path of photo

My music—— to store file folder of upload music. The default road path of audio player

File manager → select memory card

Open	Open selected file folder
New folder	Create a sub folder in selected file folder
Rename	Rename selected file folder
Delete	Delete selected file folder

Album

All photos are saved in Album

View	View appointed photo
Send	Send photo via Bluetooth
Use as	Use photos in other ways
Rename	Rename the album
Delete	Delete the album
Sort order	To sort
Delete all	Delete all albums

ORGANIZER**Calculator**

Basic calculator

Calendar

1. Jump to appointed date: shange current date of schedule to appointed date
2. Jump to current time: select this option to return default

Alarm*Switch:* open/close alarm clock*Time:* set alarm time

Set alarm clock ring: Select one of default alarm clock rings or rings in file manager

Prompt type: Choose vibration& ring, vibration or ring

Repeat: Choose one time, every day or customization

SETTING

Profile

Menu → setting → profile → general mode → customize → alert type

Ring only	Select to only ring when a call is incoming
Vibration only	Select to only vibrate when a call is incoming

Vibration and ring	Select to both ring and vibration when a call is incoming
Vibration then ring	Select to vibrate first and then ring when a call is incoming

Menu → setting → profile → general → mode → customize → ring type

Repeat	Repeat ring when a call is incoming
Beep one	Just ring one time when a call is incoming

Menu → setting → profile → general → customize → ring tone

You can select rings of incoming call came with the mobile phone, or choose your favorite in memory card by opening multimedia file

Menu → setting → profile → general → customize → ringtone volume

You can adjust volume of incoming call ring

Menu → setting → profile → general → customize → message

You can select prompt tone of message

Menu → setting → profile → general → customize → message volume

You can adjust volume of message prompt ring

Menu → setting → profile → general → customize → keypad
You can set mute, click, tone and vocal tone

Menu → setting → profile → general → customize → keypad volume
You can adjust key-press volume

Menu → setting → profile → general → customize → cover open
You can set the ring when the mobile phone is uncover

Menu → setting → profile → general → customize → cover close
You can set the ring when the mobile phone is cover

Menu → setting → profile → general → customize → system alert
Can open/close prompt tone

Menu → setting → profile → general → customize → intelligent call alert
Can open/close intelligent call alert

Menu → setting → profile → general → Options → Customize → Human voice tone
Can open/close human tone voice

Attention!

Profile include general mode, mute mode , conference mode and outdoor mode. These modes can be operated except mute mode.

If you select mute mode, all incoming call ring, SMS and power on/off ring become voiceless
Hold "0" key to open hand-free function when the mobile phone is standby.

Phone settings

Time and date: Can set city, time and date format and native time of detail location

Set home city: set different city

Attention!

This option needs support of automatically update time function. Updating time and date needs networking

Set time: Set current time

Set date: Set current date

Set time format: Set time display format

Set date format: Set date display format

Separator: Set date separator

Attention!

If the battery is over-used or idle for a long time, maybe you have to reset time after power on.

Language: select language of mobile phone

Display: can set wallpaper, LCD backlight, show date, show time, show operator name, show owner, show, power on display and power off display

Shortcuts: can select 10 functions to add to quick menu as quick function

Flight mode: change general mode to flight mode

Other setting: LCD backlight : Brightness and time. Brightness and time can be adjusted

SOS button: open/close

Emergency phone number: Can set 5 phone number as emergency number

Send message: Can edit customized message and switch sending message function on and off

Help text: You can view help information

Network settings

Your mobile phone provides network selection and preference selection. Please follow the hints to perform corresponding functions

Security

SIM security:

SIM card PIN1 code : To enter PIN of SIM card. If password protection function, the screen would display "input SIM card PIN" when power on. The password would be covered by "*". PIN code can be given while you get SIM card from network operator.

SIM card PIN2 code : The PIN which is necessary for using special function (like billing call

offered by network).SIM card PUK and PUK2 code (8 char)

SIM card PUK code is necessary for changing locked SIM card PIN code. Ask to service supplier for passwords if they don't come with SIM card.

Phone security: Open/close phone lock. Phone lock is a 4-8 digit password, and its default is "1122" until you change.

Attention!

Change password: you can change default password "1122" into a 4-8 digit password you like.

If phone lock is used, the mobile phone would display "the phone is locked" when power on.

Please unlock by pressing right button or # key

External connect

Bluetooth

Because of Bluetooth wireless technology, connecting to other compatible device without line comes true. These devices contain advanced accessory like mobile phone, computer, and headset and car kit. You can share images, songs, calling cards and memo through Bluetooth. Furthermore, you can connect with compatible PC to perform file transmission, dial-up networking and other services.

Just ensuring the distance between connected devices is less than 10 meters, you can enjoy

the convenience taken by Bluetooth wireless technology

Attention!

Connection may be affected by interference. Please close Bluetooth in restricted area like hospital and plane.

Bluetooth menu:

1. *Activate Bluetooth*: Open this option to use Bluetooth. Because this function consumes power, please close this option if you don't use it
2. *Visible/Invisible*: allow the device to be visible or invisible to other devices
3. *My device*: You can view all the Bluetooth devices which can match yours after entry of this option. Meanwhile, you can perform operations to your appointed device or search unpaired devices.
4. *Name of device*

RADIO FM

This phone support FM. You can answer calls as usual while using FM. At that time, FM would mute automatically. FM may be affected when other users transmit files through GPRS or CSD.

Channel list: you can edit and save 30 radio

Manual input: You can search radio by your own. The frequency of radio is from 87.5Hz to 108.0Hz

MENU

Auto search: choose to search automatically and save searched radios to the list

Settings:

1. You can switch background play on/off
2. You can open/close loudspeaker

MAINTENANCE

- Ensure mobile phone avoid damp. Liquid may cause erosion of circuit. If your phone is damp, please take out the battery first, and then dry the mobile phone and replace the battery.
- Please don't place the mobile phone to dirty or dusty environment; otherwise the components may be damaged.
- Please keep the mobile phone away from high temperature. High temperature may shorten the using time, damage the battery and distort or melt plastic components.
- Please keep the mobile phone away from low temperature. The circuit may be damaged by the sharp change of temperature.
- Please operate the mobile phone according to the requests of user manual.
- Please avoid dropping, knocking and shaking the mobile phone.
- Do not use liquid or wet cloth with strong cleanser to clean the mobile phone.

MANUFACTURER WARRANTY LEGISLATION

This warranty does not limit the rights granted to consumers under specific national legislation for consumer goods. The period of time in which it is valid this warranty is limited to 24 months, starting from the first date of purchase. If this is used for professional purposes the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, to eliminate the breakdowns that were to be found and assigned to a manufacturing defect. Except as provided under applicable law, the defects identified by the appropriate staff for assistance will be resolved by repair or, at the sole discretion Easyteck by replacing the product. This limited warranty applies only in the European country where the product is intended and it is paid entirely by the national distributor reference in that country and which is indicated at the bottom of the certificate. Some limitations to the services covered by this warranty may result from the presence of specific components for a country.

Warranty related to the equipment and spare parts contained in the pack

In the package of the product under this warranty may be contained accessories or parts that have a different warranty period as evidenced by consumers. The warranty period are summarized as:

- **24 mesi** for the phone
- **12 mesi** for non-consumable accessories
- **6 mesi** for batteries, headsets, memory cards or other

Are not covered under warranty:

- Manuals and packaging
- The contents of the user configurations downloaded in the product or the third party software
- Costs related to product shipments to and from the authorized service center
- The deterioration due to normal wear and tear also including batteries
- The accidental or breakage due to inexperience and all damages caused by any external agent.
- All damages caused by any use not described in the manual accompanying the product.
- All failures caused by use of non-original accessories, from viruses or connections to computers and networks.
- All product defects caused by exposure to moisture and/or steam from use in environmental conditions or extreme temperature or in the presence of corrosion, oxidation, payment of food, liquid or chemicals.

Limits of Liability:

The SIM card needed to phone use is provided by telephone operator and it is therefore excluded from the guarantee.

- This guarantee is the protection afforded to the consumer through the dealer from Easyteck reference and does not intend to restrict consumer safeguards put in place required by the dealer legislation of different countries.
- This guarantee will be granted solely and exclusively in the technical centers or from authorized

dealers who treat the marketing of brand products Easyteck.

- The terms of guarantees are not extended in any way and shall be payable only from the date of first sale of the product to the consumer as a receipt for a valid certificate.
- Broken parts replaced during warranty repairs are the sole property Easyteck and cannot be demanded by consumers in any way.
- The consumer who needs to repair the product should always pay the charges of the conveying to send the goods to the authorized facility, free of any lock or security code that restricts or impedes the use.
- To the extent required by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damage due to loss of user data caused by any defect covered under warranty.
- Are also excluded from responsibility in the loss of profits, losses due to the unused of the product or loss of revenue for any direct, indirect, special or consequential damages.
- The responsibility for Easyteck is always limited to the purchase value of the product and consumers should always keep copies and his treatment of the data and software program in memory of the phone.
- For faults which, for the reasons listed above, were not attributable to the terms of this warranty the consumer wishes to make no repairs will be required to pay the consideration of the budget requested by the service center.

Easyteck can not in any way be held responsible for this strange request because out from the protection guarantee.

CAUTION: The warranty is valid if they aren't ever found on the product attempts to open or tampering of any kind including removal and/or deletion of labels and/or IMEI of the product.
Distributor for Italy: Fonex S.p.A. via dell'Artigianato 2/4 Sant'albano Stura (CN) - ITALY

Stamp and signature of dealer
Date of purchase:

CE 0700



CORRECT DISPOSAL OF THE PRODUCT

INFORMATION FOR USERS

In reference to the art. 13 of the legislative decree 25th July 2005, n. 151 "Implementing directives 2002/95/CE, 2002/96/CE, regarding the reduction of the use of the dangerous substances in the electric and electronic devices and the waste disposals"

The symbol of the crossed waste box on the device or on the packaging indicates that at the end of the life of the device, it must be thrown separately from the other waste.

The person who throws the device must put it in the particular waste box in which there are only electric and electronic waste or he must bring it to the retail to buy another similar device.

If everyone put the device in the precise waste box, it helps the environment, the health and the recycling of the materials can be done.

The illegal disposal of the product leads the application of the administrative sanctions provided by the existing standard.



CORRECT BATTERY DISPOSAL OF THE PRODUCT

The symbol of the crossed waste box put on the battery means that it must be thrown separately from the other waste at the end of its life.

If chemical symbols Hg, Cd or Pb are on the label means that in the battery there are mercury, cadmium and lead with a superior level quantity determined by the directive UE 2006/66.

So the battery must be correctly wasted as the substances inside can cause damages to the health and to the environment.

Declaration of conformity:

We hereby declare that this product C021/T106 has been tested by PHOENIX TESTLAB and passed the required directives Article 10.5 of R&TTE Directive 1999/5/EC for the following specifications:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011, EN 50360:2001/A1:2012, EN 62209-1:2006, EN 62209-2:2010, EN 50566:2013, EN 62479:2010, EN 61000-6-3:2007, EN 61000-6-1:2007
ETSI EN 301 511 V9.0.2:2003-03, ETSI EN 300 328 V1.8.1:2012-06
ETSI EN 301 489-1 V1.9.2:2011-09, ETSI EN 301 489-7 V1.3.1:2005-11
ETSI EN 301 489-17 V2.2.1:2012-09

This product can be sold in European community